


## **Gilbarco Configuration Guide**

To setup a United kiosk to interface with Gilbarco, the site server and the routers must be configured in a specific way. These items in the Sierra Site Server need to be changed from the default for the Gilbarco interface:


NOTE: You must have a valid XML Credit Activation Code saved on the server!

Go to the Setup tab, then go to Site then click Edit next to the site name. Set the Site ID in Site Configuration to numeric values starting from 1 for each unit at the site.

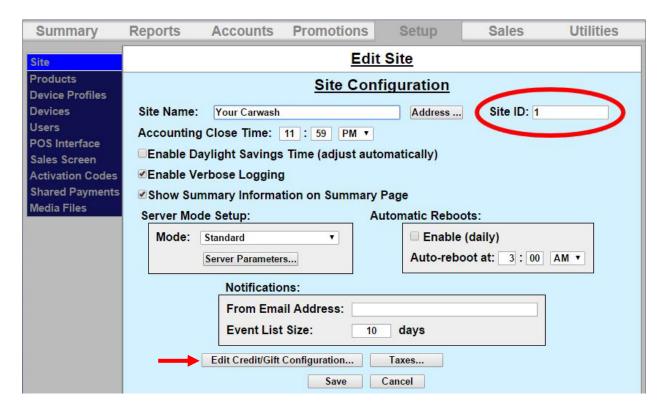

Next, click the Edit Credit/Gift Configuration button at the bottom of the page.



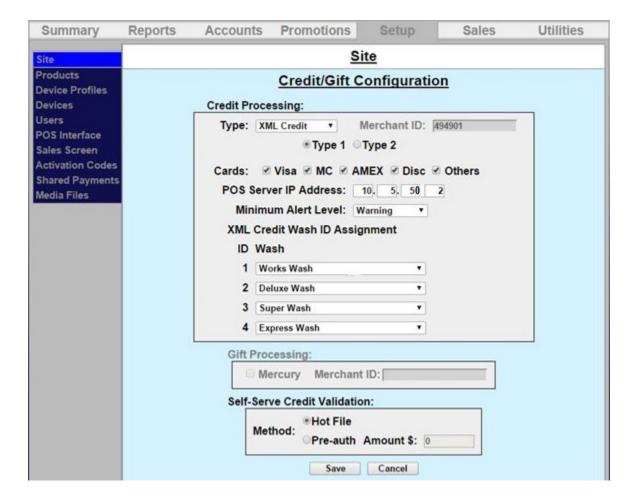


- 1. Select XML Credit for the drop-down menu.
- 2. Select Type 1 for Gilbarco.
- 3. Check Others under Cards if fleet cards are to be supported.
- 4. Set POS Server IP Address to 10.5.50.2
- 5. Select the Minimum Alert Level from the drop down menu. Informational alerts will send notifications for all functions. Warning alerts will only send notifications when there is an error in a component in the unit. Fault alerts only send notifications when the unit goes out of service.
- 6. Adjust position of the washes so that the wash number ID matches Gilbarco's Package number that is set in Passport. Click Save.
- 7. Click Save again.

See the illustration on the next page for router setup and configuration.



If you have multiple kiosks on site, you should connect the primary kiosk into SA3042 FIRST, so that it can receive the 192.168.2.100 reservation. To check to see if the server received the 192.168.2.100 reservation, you must login to the router configuration pages (on page 6).



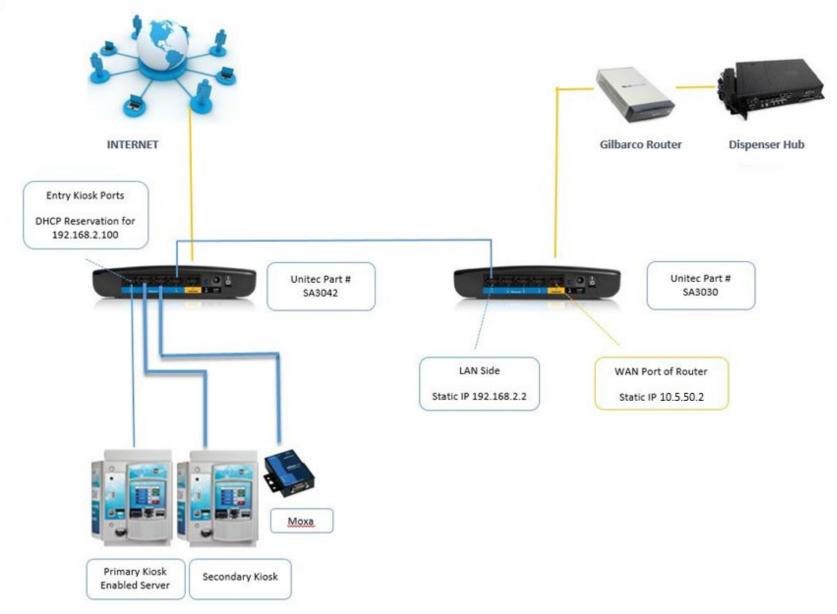



Once the router network is setup, you must enter basic configuration information into the SA3042 router, but first you must connect to the router configuration pages.

- 1. Connect a laptop or PC directly to the first available router port using an Ethernet LAN cable.
- 2. Open the web browser on the computer.
- 3. In the browser address bar, type the following address (You must include the http://): http://192.168.2.1
- 4. The Router Management Login screen will appear:
- 5. Enter "admin" (Linksys's default administrative Username) into the User Name field.
- 6. If prompted to enter a password, enter "unitec83". Click the OK button to login.


When you login upon initial setup, the Internet Setup screen will appear.

- 1. Choose your language from the drop down menu by Language.
- 2. Select Static IP for the Internet Connection type.
- 3. Enter the Internet IP Address, Subnet Mask, Default Gateway, and Primary and Secondary DNS. This information should be provided by your Internet Service Provider (ISP). Click Save Settings.

NOTE: In some devices, the router Subnet mask is set for 255.255.255.192. If your Gilbarco register system has recently been updated, the subnet mask will need to be changed to 255.255.255.0.

Contact Unitec Tech Support at 18004UNITEC or <u>techsupport@startwithunitec.com</u> to reset the router and change this setting.



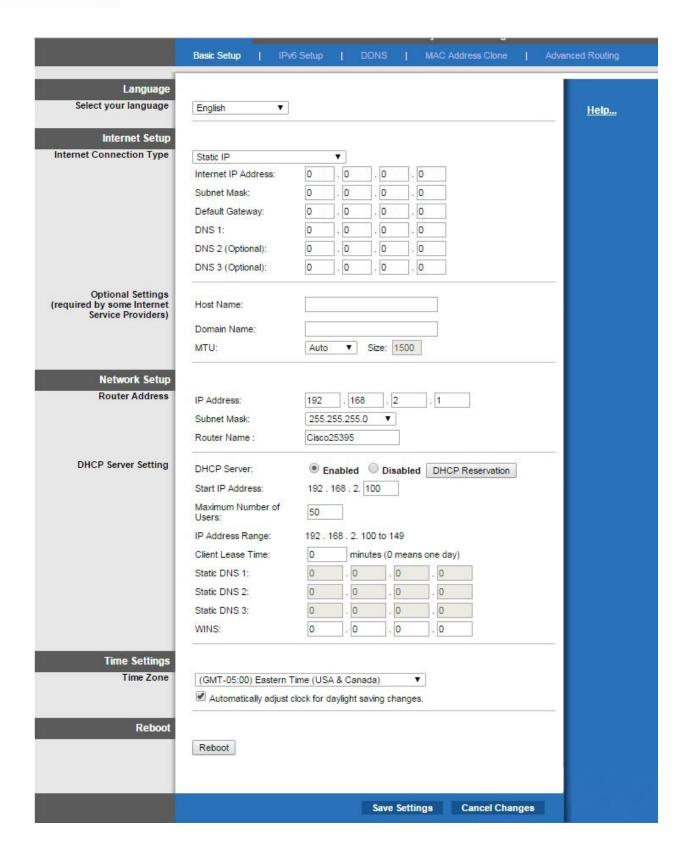



To check to make sure that the main server has received the 192.168.2.100 reservation, click DHCP Reservation. Under "Clients Already Reserved", check the last octet associated with the server client name under Assign IP Address. Enter 100 in that field, if it is not already there, then click Save Settings.

