

# NoPileups™ Stop Handling Procedure

1. Watch Replay  
Verify NoPileups triggered the stop (Load on Display background flashes red or yellow) and review video.
2. Reposition Vehicle  
If not on original roller/flight, correct physical vehicle position. At tunnel exit, direct customer to leave.
3. Align Red Box  
If vehicle is ahead of red box, press ROLLER on NoPileups Remote.
4. Restart Conveyor  
Start conveyor using standard wash procedure.

Hopped Roller/Flight  
Press ROLLER button



Same Car, Multiple Stops  
Press IGNORE button



**Ignored Vehicles Are Not Tracked by NoPileups**

NoPileups Does Not Stop for Ignored Vehicles.

## NoPileups Support

833-667-4538 | [Support@NoPileups.com](mailto:Support@NoPileups.com)



 VIEW ONLINE