


Verifone Configuration Guide

To setup a United Entry unit to interface with Verifone, the site server and the routers must be configured in a specific way. These items in the Site Server need to be changed from the default for the VeriFone interface:

Go to the Setup tab, then go to Site then Edit next to the site name. Set the Site ID in Site Configuration to numeric values starting from 1 for each unit at the site. Next, click the Edit Credit/Gift Configuration button at the bottom of the page.

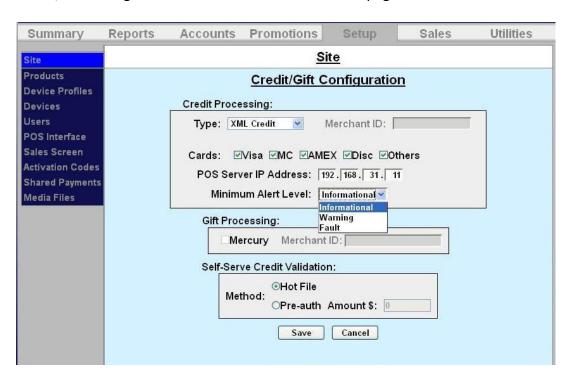

- 1. Select Unitec XML for the drop-down menu.
- 2. Check Others under Cards if fleet cards are to be supported.
- 3. Set POS Server IP Address to 192.168.31.11.
- 4. Select the Minimum Alert Level from the drop down menu. Informational alerts will send notifications for all functions. Warning alerts will only send notifications when there is an error in a component in the unit. Fault alerts only send notifications when the unit goes out of service.
- 5. Click Save.
- 6. Go to Device Profiles then click Edit by the Portal profile. Go to Wash Dispensing.



Adjust position of the washes so that the wash number at the leftmost column (labeled "No.") of the Edit Wash Type screen matches VeriFone's Package number. Click Save.

See the illustration on the next page for router setup and configuration.

